


# CUSTO


your digital carpenter

## MEASUREMENT GUIDELINES

Please refer to the following guidelines to measure the accurate dimensions of your space, which is critical to assure that your customized furniture will snugly fit in your room.

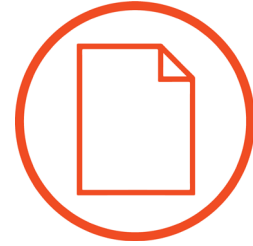

Resources Required: Measuring Tape, Pencil & Paper

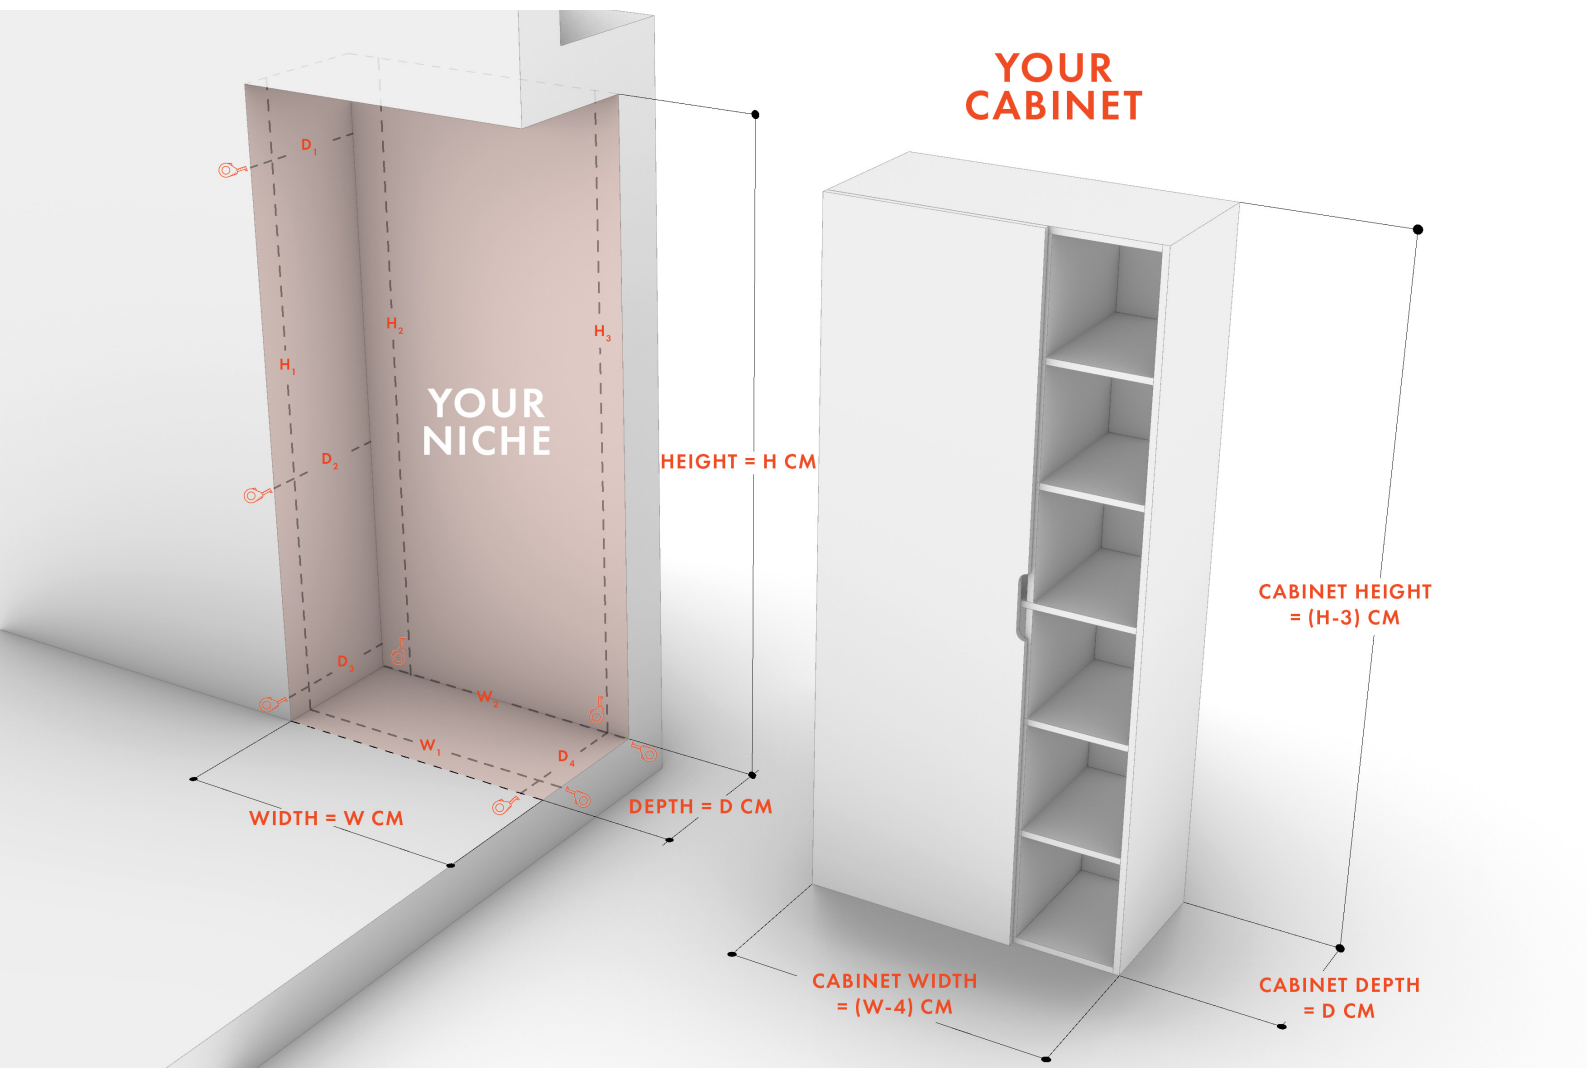

**STEP 1** Measure the width (W), height (H) and depth (D) of the niche at several locations, in each case taking the smallest measurement. Calculate your cabinet dimensions by subtracting 3 cm from the height (H-3 cm) & 4 cm from the width (W-4 cm). This is to ensure that the cabinet will always fit the space, allowing for a problem-free installation.

W: 74  
H: 160  
D: 35

\*All dimensions in cm.

Rows: - 6 +  
Columns: - 3 +

Finish:       
Joints:

Accessories:  
Feet Doors Loose Drawers

Qty: - 1 +



Free delivery and assembly

**STEP 2** Proceed to our customization page to use our customization tool. Enter the measured dimensions using the sliders on the left. After adjusting the sliders, you can start designing the cabinets by adjusting the partitions and shelves. You can further configure the cabinets by adding in doors and boxes.

**Happy CUSTOMizing!**  
[www.customizedstorage.com](http://www.customizedstorage.com)

### For further assistance

Please contact our team if you have **any questions!**  
You can quickly and easily reach us by email, phone or Whatsapp.  
You may also use the chat tool on our website.

**Email** [hello@customizedstorage.com](mailto:hello@customizedstorage.com)  
**Phone + Whatsapp** +65 9810 6417



/customizedstorage



/customizedstorage